

# Photostorie ebook Instructions.

## ebook28 2.8 inch screen

Your Photostorie ebook28 arrives preloaded with two sample videos and four jpeg images.

Opening the front cover will immediately cause the video content to play. Closing this will shut off the device.

The usb cable provided is used to charge and upload content onto the the ebook. It is not possible to play any content on the unit whilst it is charging or connected with the usb cable. However it is possible to view the content on your computer just by selecting the appropriate drive on your system when connected with the usb cable.

Videos must be saved in the AVI format before transferring to the ebook28. Images may be transferred as jpegs.

## ebook43 4.3 inch screen

Your Photostorie ebook43 arrives preloaded with two sample videos and four jpeg images. The Videos are contained within the Video folder and the jpegs are contained within the Photos folder. These folders must not be deleted as they will be used to contain your own content. Sample content may be deleted at any point.

Opening the front cover will immediately cause the video content to play. Closing this will shut off the device.

The usb cable provided is used to charge and load content on to the ebook. It is not possible to play any content on the unit whilst it is charging. However it is possible to view the content on your computer just by selecting the appropriate drive on your system when connected with the usb cable.

Videos must be saved in either MP4 or AVI format before transferring to the ebook43 video folder. Images may be transferred as jpegs. to the photos folder.

## Operating instructions for ebook 28 and ebook43

Each ebook contains 6 buttons , 3 along the right hand side and 3 along the lower side



Play / Pause



Next Image / Video



Previous Image /  
Video



Volume



Volume



Video / Jpegs